# 34L Touch Control Convection

# **MICROWAVE**

PRODUCT CODE: EMW34TBK



#### **FEATURES:**

- 34L Stainless Steel cavity
- Touch control
- White LCD display
- 5 power levels & 4 combi
- All black finish

- 10 Auto menu
- 95min Kitchen timer
- Speedy cooking + multi-stage cooking
- Child safety lock

#### TIMER

Use to set microwave cooking time. Allows you to set up to 95 minutes.

## **DEFROST BY TIME**

Use to set microwave defrost time. This function will allows you to set a maximum of up to 95 minutes.

#### **DEFROST BY WEIGHT**

Defrost food according to weight from 100g to 2kg.

#### MULTI-STAGE COOKING

This feature allows you to set multiple stages of cooking for example, the defrost function followed by microwave function.

ELECTRIC REQUIREMENTS	This microwave is fitted with a cord and
	10 amp plua

10 amp plug.

POWER CONSUMPTION Rated input power (microwave): 1550w

Rated output power (microwave): 1000w

Convection Input: 2300w Rated Voltage: 220-240V

WEIGHT: 24.5kg (Gross) / 21.5kg (Net)

**OVEN CAPACITY:** 34 Litres

**BARCODE:** 9347726029054

# eurocooking



Warranty

#### **PRODUCT DIMENSIONS**

595mm  $\times$  468mm  $\times$  388mm

## **CLEANING & MAINTENANCE**

Easy clean interior. Clean stainless steel using only recommended stainless steel cleaning products. Abrasives, corrosive detergents, bleaches or acids not required for cleaning the microwave oven.

Clean the cavity of the oven after using with a slightly damp cloth.

The door frame, seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

## **INSTALLATION**

Please refer to the product manual for full installation instructions.

Product must be installed by a qualified technician.

#### PRODUCT DIMENSIONS



