


45cm Freestanding DISHWASHER

PRODUCT CODE: **EDS45XS**

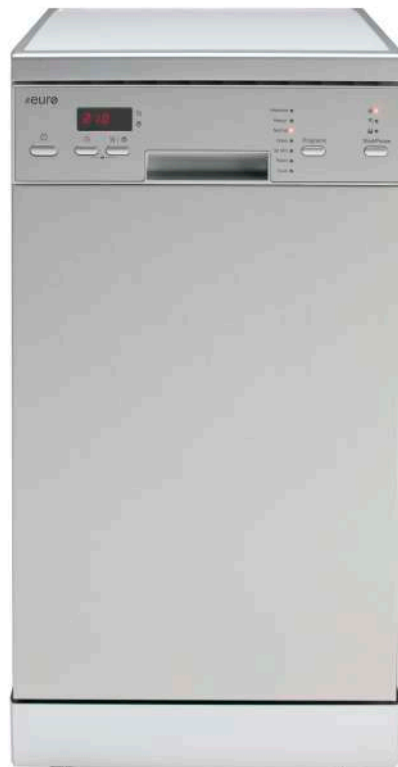

FEATURES:

- + 10 place setting
- + Stainless steel finish
- + 2 level height adjustable upper basket
- + Slide out cutlery rack
- + Alternative wash function
- + Delay start option (1-24hours)
- + Extra dry and strong wash functions
- + Child lock safety
- + Concealed Heating Element
- + Removable top cover (30mm)
- + Water consumption 11.0L
- + 7 Wash programs
- + Rapid
- + Soak
- + Eco
- + 90 minute
- + Glass
- + Heavy
- + Intensive
- + 3.5 star energy rating
- + 3.5 star water rating

SPECIFICATIONS:

| | |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Water Consumption | 11.0 Litres per wash (using normal program) (3.5 star water rating) |
| Energy Usage | 189 kwh per year (Cold water connection, using ECO program seven times per week) (3.5 star energy rating) |
| Noise Level | 49db |
| Inlet Hose/Drain Hose Length: | 1.8m / 1.4m |
| Water Connection | Cold water (as dishwasher has its own heating element) |
| Weight | 45.5kg (Gross) / 40.0kg (Net) |
| Barcode | 9347726005522 |



eurocooking



Warranty

PRODUCT DIMENSIONS

448mm width x 600mm depth x 845mm height
(adjustable feet 15mm)



KEY FUNCTIONS

10 PLACE SETTINGS

The 10place settings option this dishwasher provides results in greater flexibility in what types of dishes and cutlery that can be washed.

2 LEVEL HEIGHT ADJUSTMENT TOP BASKET

The adjustable top basket can be set higher or lower in the washing baskets, ensuring wash space for those larger cooking utensils and dishes.

SIMPLE ELECTRONIC PROGRAM CONTROLLER

This EDS45XS dishwasher operates via an electronic push button control. You can select your preferred program by using the electronic push buttons on the top right of the front panel.

7 WASH PROGRAMS

The EDS45XS dishwasher provides you with the choice of 7 different wash programs to ensure you can select the type of wash which best suits whether it be those few dirty dishes or after that large dinner party.

SLIDE OUT CUTLERY RACK

This slide out rack provides an easy and organised way to load your cutlery.

INSTALLATION INFORMATION

Please refer qualified installer to our product instruction manual.

FILTER CLEANING INFORMATION

Drain pump filter: requires cleaning monthly.
This will ensure no interruptions with the dishwasher operation.